
TE □ L ∧ SMARTPHONE 6.2

QUICK START GUIDE

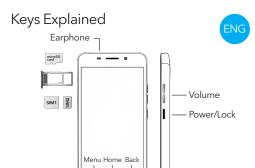

Charge/USB

	Key	runction
	Power Key	To turn the phone on and off, switch to Airplane mode, take a screenshot and change audio profile settings, press and hold the "Power" button and select an option. Press to switch your phone to Sleep mode. Press to wake up your phone.
	Home Key	Press to return to the Home Screen from any application or screen. To activate Google Now on Tap, press and hold the "Home" button while in the active browser or application window.
	Menu Key	To see a list of recently used applications, press and hold the "Menu" button. Press to get the options for the current screen.
	Back Key	Press to go to the previous screen.
	Volume Keys	Press and hold the "Volume" button to increase/ decrease the sound and to adjust the audio profile.

Kev

Function

Installing the SIM Card

Switch off your phone before installing SIM card.

- 1. Take the needle included in the package $\,$
- 2. Insert it into the hole beside the SIM tray
- 3. Put the SIM card inside the tray as shown on the picture
- 4. Return the SIM tray back in the hole

Instead of a SIM card, you insert an SD card into the SIM1 slot. Instructions on how to insert an SD card are shown in the illustration. The phone supports SD cards of up to 32 GB.

