Alcatel 4400 User Guide - Advanced Handset

To make an internal call Dial extension number

To make an external call Dial 9 followed by the telephone number

Dial by name Type 1st 3 letters of persons name use up and down arrow

to select name and press return key to dial

To receive a call Lift receiver or press handsfree key

To transfer a call Dial extension number, announce caller and replace

receiver

To retrieve a call Press the 'Enquiry' key or press 2

Broker call Press 'Broker' key (allows extn to toggle)

To hold a call Press 'Enquiry' key

To retrieve a held call Press 'Enquiry' key

To park a call Press 'Park' in display or dial *75 and extension number you are picking

call up from

To retrieve a parked call Dial *75

To initiate a 3 way conference Receive/make 1st call, dial extension number of 3rd party,

and press 'Conf' key in display or dial 3 to join all 3 together

To exit 3 way conference Replace receiver, the other parties will remain talking

Last number redial Press your redial key or dial *70

Callback (If extn busy) Dial the extension number and press 5

Pick up individual extn Dial *72 and extn number that is ringing

Group call pick up Dial *73

Divert calls immediately Press 'Divert' key or dial *60 and extension number to receive calls (i,

Consult, service, apply, select immed, apply, dial extn no)

Divert calls when busyDial *61 and extension number to receive calls

(i, Consult, service, apply, select Bynor, apply, dial extn)

Divert calls on no reply

Dial *62 and extension number to receive calls

Divert calls busy/no replyDial *63 and extension number to receive calls

Cancel all diverts Dial *64

Do not disturbDial *78 and enter your personal code

Cancel do not disturb Dial *78

To programme personal directory Press i key, Press 'Prog' key in display, press 'Keys' in display, select

Key using arrows, press soft key, dial 9 and telephone number or extension number, press 'Apply' in display, type name using keypad (max 6 characters), press 'Apply' in display, press release key

To use personal directory

Use navigator key to select screen and press soft key to call

To change ring tune Keep pressing the 'Ok' key, or press 'Next' in display

To change ring volume Press + or – keys

To activate touch tone dialling When answered by a recorded message press tones key or dial

#4

To lock your handset Dial *77

To unlock your handsetDial *77, enter personal code (0000)

E:\Internet\swcomms.co.uk_V2\user guides\4400\4400 User Guide Advanced handset.doc