

The world's first social mobile.

This is beyond a web phone. This is a social networking mobile designed to keep you in touch and online wherever you are. Web essentials like Facebook, Skype, eBay and Windows Live Messenger are always on, always connected, ensuring you're never out of touch.

We believe your phone should do the hard work for you and that you shouldn't need a degree in nuclear physics to work it. Now here's the Switcher. It runs along the bottom of your Home screen with all your favourite applications, so they're easy to get to and quick to open.

Your Contacts used to be just a static list. Not now. We've brought it to life, integrating your Facebook, Skype and Windows Live contacts so when your friends' status (or even their profile pictures) change, you'll see it live in your Contacts.

It's never been quicker or easier to get online and keep connected with the things that matter to you.

To get straight to a section, just click on the titles opposite.

MENU

GET SET UP

YOUR MOBILE EXPLAINED

INTERNET:

SKYPE

FACEBOOK

WINDOWS LIVE MESSENGER

EBAY

LAST.FM

FEEDS

WIDGETS

PLANET 3

HANDSET:

CALLS

TEXT, MULTIMEDIA AND EMAIL MESSAGES AND SKYPE CHAT

CONTACTS

MEDIA AND GAME CENTRE

EXTRA FEATURES AND SECURITY

CONNECTIVITY SETTINGS

HELP



Q

HOME

MENU

BACK

NEXT

GET SET UP

First things first.

There are a few things you need to do to get your mobile working. Things like inserting your USIM and battery and setting time and date. Then there are the things that personalise the phone, like setting wallpaper.

Getting ready to go. That's what this section is all about.

INSERT YOUR USIM, BATTERY
AND MEMORY CARD, AND
CHARGE YOUR MOBILE

WIZARD

TURN YOUR PHONE ON AND OFF

SET TIME AND DATE

CHOOSE A WALLPAPER

SET YOUR RINGTONE

SET YOUR SCREEN SAVER

SET UP VOICEMAIL

SET UP VIDEOMAIL

CHOOSE A TEXT ENTRY METHOD

3

GET SET UP

TURN YOUR PHONE ON AND OFF

SET TIME AND DATE

CHOOSE A WALLPAPER

SET YOUR RINGTONE

SET YOUR SCREEN SAVER

SET UP VOICEMAIL

SET UP VIDEOMAIL

CHOOSE A TEXT ENTRY METHOD

INSERT YOUR USIM, BATTERY AND MEMORY CARD, AND CHARGE YOUR MOBILE

Your 3 USIM can only be used in mobiles which are enabled for 3 services. If you try to use the USIM in other mobiles you could seriously damage the mobile and may be unable to use it, including making emergency calls. If you do that, we are not responsible for any such damage or usage problems.

ILLUSTRATIONS

- 1 Remove battery cover and battery
- 2 Insert your USIM
- 3 Insert memory card



5



4 5 Insert your battery

6 Charge your battery

and battery cover

Fully charge the battery before using it for the first time.






HOME

MENU

BACK

WIZARD

The Wizard will appear when you first turn on your mobile to take you through setting the time and date and also plays a short video. You need to go through the Wizard so that your phone will work properly.

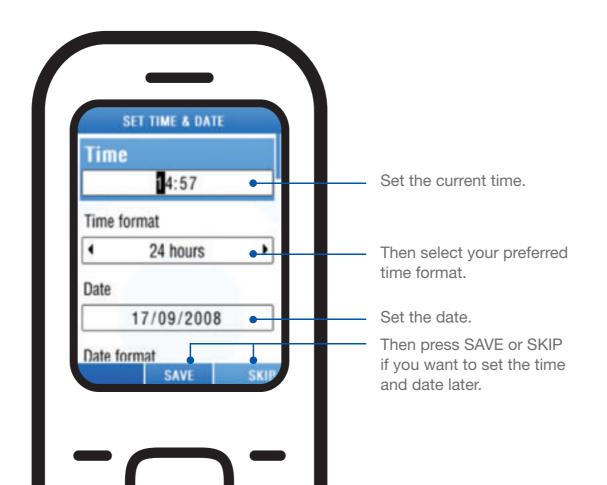

GET SET UP

INSERT YOUR USIM, BATTERY AND MEMORY CARD, AND CHARGE YOUR MOBILE

WIZARD

TURN YOUR PHONE ON AND OFF

SET TIME AND DATE

CHOOSE A WALLPAPER

SET YOUR RINGTONE

SET YOUR SCREEN SAVER

SET UP VOICEMAIL

SET UP VIDEOMAIL

CHOOSE A TEXT ENTRY METHOD

3

TURN YOUR PHONE ON AND OFF

POWER ON

Press and hold to switch on your phone.

POWER OFF

Press and hold to switch off the mobile.

GET SET UP

INSERT YOUR USIM, BATTERY AND MEMORY CARD, AND **CHARGE YOUR MOBILE**

WIZARD

TURN YOUR PHONE ON AND OFF

SET TIME AND DATE

CHOOSE A WALLPAPER

SET YOUR RINGTONE

SET YOUR SCREEN SAVER

SET UP VOICEMAIL

SET UP VIDEOMAIL

CHOOSE A TEXT ENTRY METHOD



SET TIME AND DATE

- Press MENU from the Home screen and select SETTINGS > Time & date.
- Enter the date and time.
- Select SAVE.

CHOOSE A WALLPAPER

- Press from the Home screen and select SETTINGS > Display > Main screen.
- Scroll to Show wallpaper
 SELECT > select your
 preferred image > SELECT
 > SAVE.
- You can also select Show clock > ENABLE.

GET SET UP

INSERT YOUR USIM, BATTERY AND MEMORY CARD, AND CHARGE YOUR MOBILE

WIZARD

TURN YOUR PHONE ON AND OFF

SET TIME AND DATE

CHOOSE A WALLPAPER

SET YOUR RINGTONE

SET YOUR SCREEN SAVER

SET UP VOICEMAIL

SET UP VIDEOMAIL

CHOOSE A TEXT ENTRY METHOD





SET YOUR RINGTONE

- Press MENU from the Home screen and select SETTINGS > Profiles.
- Select Normal or other profiles > OPTIONS > Edit > OK.
- Select Ringtones & alerts
 CHANGE > select your
 preferred tune from Track
 or Artist or Album etc.
 SELECT.

SET YOUR SCREEN SAVER

- Press from the Home screen and select
 SETTINGS > Display >
 Screensaver setting.
 Select Image > select your preferred image > SELECT.
- Or you can select Date & time > ENABLE or select OFF to turn off the screen saver.

GET SET UP

INSERT YOUR USIM, BATTERY AND MEMORY CARD, AND CHARGE YOUR MOBILE

WIZARD

TURN YOUR PHONE ON AND OFF

SET TIME AND DATE

CHOOSE A WALLPAPER

SET YOUR RINGTONE

SET YOUR SCREEN SAVER

SET UP VOICEMAIL

SET UP VIDEOMAIL

CHOOSE A TEXT ENTRY METHOD



SET UP VOICEMAIL

SET UP VIDEOMAIL

 Press and hold for a video call. Then follow the voice prompts to record your video greeting.

GET SET UP

INSERT YOUR USIM, BATTERY AND MEMORY CARD, AND CHARGE YOUR MOBILE

WIZARD

TURN YOUR PHONE ON AND OFF

SET TIME AND DATE

CHOOSE A WALLPAPER

SET YOUR RINGTONE

SET YOUR SCREEN SAVER

SET UP VOICEMAIL

SET UP VIDEOMAIL

CHOOSE A TEXT ENTRY METHOD



CHOOSE A TEXT ENTRY METHOD

The multipress, T9 and numeric input modes can be changed by pressing within a text box.

- ABC Input: use the keypad to enter letters, numbers, symbols, and other characters. Press the same key repeatedly to cycle through available characters. If you do not press a key for two seconds, the character in the block cursor is accepted, and the cursor moves to the next position.
- T9 Text Input: you press each key only once, even if the character you want is not the first character on the key. It tries to predict the word.
- 123 Input: if you want to input a series of numbers, you need to change to 123 mode or press and hold the particular key for three seconds.

- Symbol Input: In ABC and 123 mode, short press ♣ and you can access the symbol menu. While in T9 mode, press and hold ♣ for a few seconds to access the symbol menu.
- Select OPTIONS >
 Dictionary > Add to/Go to,
 to view the dictionary or add
 new words to it.
- Press and scroll to select ENG to change the writing language. The options are:

Italiano IT

English ENG

Français FR

Deutsch DE

Dansk DA Svenska SV

GET SET UP

INSERT YOUR USIM, BATTERY
AND MEMORY CARD, AND
CHARGE YOUR MOBILE

WIZARD

TURN YOUR PHONE ON AND OFF

SET TIME AND DATE

CHOOSE A WALLPAPER

SET YOUR RINGTONE

SET YOUR SCREEN SAVER

SET UP VOICEMAIL

SET UP VIDEOMAIL

CHOOSE A TEXT ENTRY METHOD





HOME MENU

BACK



INQMOBILE.COM

Your mobile can do a lot of things.

This section explains what all the icons and symbols mean, and shows you how to find your way around your mobile.

YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

HOME

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC

MENU BACK NEXT



12

HOME

YOUR MOBILE'S SCREEN

Your mobile's screen is divided into four basic screens: the Status bar, the Main Screen, Switcher and the Prompt box.



Shows what operations are taking place, the battery and signal strength. See the next page for status icon details.

HOME SCREEN

If you are not on the Home screen, the screen will show the main menu or the submenu related to that particular feature.

SWITCHER

Quick access to all open applications and easy to close open applications.

THE PROMPT BOX

Displays various prompts in the soft key boxes. These are activated by pressing the appropriate left and right soft key under each one.

YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC



YOUR MOBILE'S SCREEN YOUR MOBILE EXPLAINED

Icon	Function description
1 36	Signal strength – shows the strength of your mobile's connection with the network indicates you are outside the video service area
=	Battery – shows the level of battery shows little battery power left
 (>	Profile - Normal - notifies you of an incoming call or message. ☑ Silent. ☐ Vibrate only. ☐ Loud. ☐ Headset. ☐ Customised and ☑ Aeroplane mode
≘ *	Message – appears when there are new text messages
	New messages – appears when there are new unread text and multimedia messages
R	Roaming – appears when you are out of your home area and have registered on a different network

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC

3

YOUR MOBILE'S SCREEN

Icon	Function description
▶*	MMS – appears when there are new multimedia messages
@	Email - appears when there are new emails
	Push message – appears when there are new push messages
	Sending message background
II H	HSDPA network is available
1 35	3G network is available
l E	EDGE network is available
6	GPRS network is available
0	Alarm clock - appears when the alarm clock is set

YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC



YOUR MOBILE'S SCREEN YOUR MOBILE EXPLAINED

Icon	Function description
8	PDP (Packet data protocol) - PDP always on
*	Bluetooth® activated – this icon indicates Bluetooth® is active and connected to another device. If Bluetooth® isn't connecting with the other device, this icon will be grey but not blue
*	Hide – Bluetooth® is hidden from other Bluetooth® enabled devices
	Memory full – appears when the mobile memory is nearly full. In this case it may be necessary to release some memory on your mobile
超	Calendar – appears on the day when a calendar event exists
t⊞	Video call forward
t⊞	Voice call forward
▶	Minimise Music - music is playing in the background

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC



SWITCHER

No more tedious trawling through menus to find the things you use most often. The Switcher gives you instant access to things like Google or Facebook via a scrollable menu at the bottom of the Home screen. It shows your most important applications and anything you've got open at the moment.

You can choose to add or take away icons from the carousel, so if you've got a favourite application you can get to it straight away.

When you're using an application and you call up the Switcher, the home icon appears in the centre.

If the phone is idle, the home icon doesn't appear (seeing as you're already there).

- To add an item to the Switcher customise area, select OPTIONS > Add items to switcher.
- To remove item from the Switcher customise area. select OPTIONS > Remove from switcher.
- To set Switcher mode to Active one touch Switcher, select OPTIONS > Activate one touch switcher.
- To access an open application, use left or right key to select the application and then press OK.

YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC


CONTINUE -->



17 HOME MENU **BACK NEXT**

SWITCHER

- To close a current application select OPTIONS > Close.
- To see the help about Switcher select OPTIONS > About switcher.

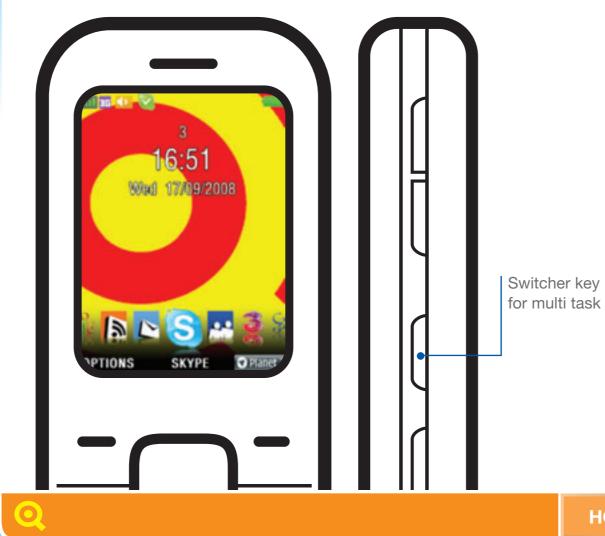

YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC

3

HOME

MENU

BACK

Click below to see all of your mobile's menu options and what they include. Press MENU.





YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC

BACK

NEXT

Click below to see all of your mobile's menu options and what they include. Press MENU.





MUSIC

- Now playing
- Artist
- Album
- Track
- Movies - Playlist
- Recently played
- Recently added
- 3MusicStore

YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC





Click below to see all of your mobile's menu options and what they include. Press

YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC



GAMES AND .

GAMES AND APPS

Applications

- Email on 3
- Facebook
- Skype
- Windows Live Messenger

Trial games from 3

- Homepage
- MShop
- Bejeweled
- PAC-MAN
- Tetris
- de Blob

Available games may vary. Check with your network operator for more details.



NEXT

Click below to see all of your mobile's menu options and what they include. Press MENU.





WEB

- Enter address
- Search

Google Yahoo!

- My bookmarks
- History
- Sign in
- Skype
- Saved pages
- Planet 3

YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC





NEXT

Click below to see all of your mobile's menu options and what they include. Press MENU.



YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC

MESSAGES



- New
- Inbox
- Email
- Email on 3
- Facebook Inbox
- Pokes
- Requests
- Chats
- Windows Live Messenger
- Outbox
- Drafts
- Sent
- Template
- Settings

3

Click below to see all of your mobile's menu options and what they include. Press MENU.





MY STUFF

- Music
- Photos
- Movies - Others
- Memory card (if memory card inserted)
- Skype

YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC



NEXT

MENU

HOME

BACK

Click below to see all of your mobile's menu options and what they include. Press MENU.





CALL LOG

- All Calls
- Missed - Dialled
- Answered
- Most used

YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC



HOME

MENU

BACK

NEXT

Click below to see all of your mobile's menu options and what they include. Press MENU.





YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC

3

26

ME MENU

BACK

Click below to see all of your mobile's menu options and what they include. Press MENU.





YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC

3

HOME

MENU

BACK

Click below to see all of your mobile's menu options and what they include. Press MENU.





ALARM

YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC

3

HOME MENU

BACK

Click below to see all of your mobile's menu options and what they include. Press MENU.





TOOLS

- Video camera
- Calendar
- Manage widgets
- Calculator
- Notepad
- PC Suite
- World time
- Stopwatch
- Voice recorder
- SIM Application (if supported)

YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC



MENU

HOME

BACK

Click below to see all of your mobile's menu options and what they include. Press MENU.





SETTINGS

- Profiles
- Bluetooth®
- Time & date
- Display
- Slide controls
- Network settings
- Advanced

YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC



MOBILE MODEM - PC

Your mobile gives you an ultra high speed internet connection for your laptop when you're out and about.

It's simple to use as your mobile has in-built drivers that will automatically install when you first connect up to your PC.

Just plug your mobile into your laptop and installation will start automatically. The Mobile Modem software will start up on your laptop screen and you will see a button saying Connect. Click this and you'll get online.



YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC

CONTINUE -->




MOBILE MODEM - PC

The Mobile Modem software also shows you the strength of your mobile signal and how fast your internet connection is.



Offline

- Medium signal / medium
- Weak signal / slow
- Strong signal / fast

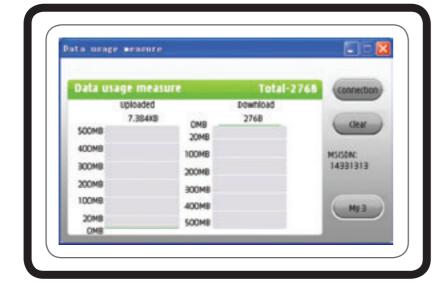

YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC

3

32

Z NII

MOBILE MODEM - MAC

Your mobile give you an ultra high speed internet connection for your laptop when you're out and about.

- Plug in your mobile to your Apple Mac and the INQ icon will show on your desktop. Double-click the INQ1 Driver Disc icon and select INQ1 USB Modem.pkg to install.
- Click Macintosh HD in desktop, select Applications
 INQ1 Modem.
- On the Mobile Modem window select Connect to go online.



YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC



All your online favourites, right here.

The most widely used internet services are integrated into the heart of your mobile so you stay connected to them all the time, receiving updates when things change. That includes news updates, the status of your contacts on Facebook, messages and eBay notifications – instantly updated and always on.

INTERNET SERVICES

SKYPE

FACEBOOK

WINDOWS LIVE MESSENGER

EBAY

LAST.FM

FEEDS

WIDGETS

PLANET 3

HOME MENU BACK NEXT

SIGN INTO SKYPE

With Skype on 3, you can make Skype-to-Skype calls and send instant messages from your mobile. Which means you can call and chat with people all over the world who use Skype, including other Skype on 3 users. You can also call phones abroad at Skype's great rates, using Skype credit.

IF YOU HAVE A SKYPE **ACCOUNT**

- Scroll to S from the Home screen and press OK.
- Select Sign in for existing users, then enter your username and password.
- Select Sign me in and set it as Automatically or Manually.
- If you select Automatically, you'll automatically sign into Skype each time you turn on your mobile.

IF YOU DON'T HAVE A SKYPE ACCOUNT

To create a new account:

- Scroll to S from the Home screen and press OK.
- Scroll to Create account for new users and press OK.
- Read the Skype End User Licence, Terms of Service and Privacy Policy available at www.skype.com/eula, www.skype.com/tos, www. skype.com/privacy or on the CD version of this user guide, select Accept and enter a username, password and an email address on the Create account screen.
- Select OK to save the settings.

SKYPE

SIGN INTO SKYPE

CHANGE SKYPE STATUS

CHANGE SKYPE SIGN IN SETTINGS

SIGN OUT OF SKYPE

SKYPE STATUS ICONS

LINKS TO:

SKYPE CHAT

SKYPE CALLS

SKYPE CONTACTS

IMPORTING SKYPE CONTACTS

HOME

MENU

BACK

CHANGE SKYPE STATUS


- Scroll to screen and press OK.
- Select Options > Change status.

CHANGE SKYPE SIGN IN SETTING

- Scroll to screen and press OK.
- Select Options >
 Settings > Sign me in >
 Automatically / Manually.

SIGN OUT OF SKYPE

- Scroll to screen and press OK.
- Select Options > Sign out.

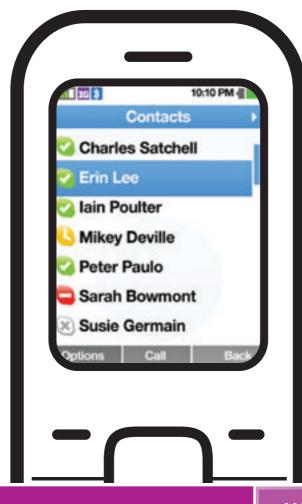

SKYPE

SIGN INTO SKYPE

CHANGE SKYPE STATUS

CHANGE SKYPE SIGN IN SETTINGS

SIGN OUT OF SKYPE

SKYPE STATUS ICONS

LINKS TO:

SKYPE CHAT

SKYPE CALLS

SKYPE CONTACTS

IMPORTING SKYPE CONTACTS

3

HOME

MENU

BACK

NEXT

SKYPE STATUS ICONS

The Skype status icon you select will appear on your mobile's status bar. This can be seen by your Skype buddies.

You can choose to set your own status to:

- Online others will see you as online (default setting when you sign in)
- Away others will see you as 'away'
- Do Not Disturb others will see you as 'do not disturb'
- Invisible others will see you as offline

SKYPE

SIGN INTO SKYPE

CHANGE SKYPE STATUS

CHANGE SKYPE SIGN IN SETTINGS

SIGN OUT OF SKYPE

SKYPE STATUS ICONS

LINKS TO:

SKYPE CHAT

SKYPE CALLS

SKYPE CONTACTS

IMPORTING SKYPE CONTACTS

3

Q

HOME

MENU

BACK

NEXT

FACEBOOK FOR INQ

Facebook® is completely integrated into your mobile. So, for example, your Facebook friends are integrated with your contacts book and you can send photos direct from your camera to Facebook. You can update your status, send messages, etc. Facebook is always on so you'll be aware of any changes to your inbox, pokes or requests.

Facebook is a trademark of Facebook, Inc.



INTERNET SERVICES

SKYPE

FACEBOOK

WINDOWS LIVE MESSENGER

EBAY

LAST.FM

FEEDS

WIDGETS

PLANET 3

LINK TO:

SET UP FACEBOOK WIDGET

FACEBOOK MESSAGES AND POKES

IMPORTING FACEBOOK CONTACTS

UPLOADING PHOTOS TO FACEBOOK



38

ш...

FACEBOOK FOR INQ

SIGN IN

Scroll to from the Home screen and press OK.

- Enter email address and password you use on Facebook or click on 'Need an account?'
- After you sign in for the first time, you will be asked if you want to add your Facebook friends to your Contacts, which we recommend you do. Then you will be able to see their status, their wall, send them messages and even give them a poke.
- To add friends to Contacts at a later date, select Friends and scroll (left) to the Mobile Friends tab.
 Select Edit mobile friends.

NOTE:

Once you are signed in the application will continually run

in the background until you sign out.

SIGN OUT

In Facebook press OPTIONS > Log out.



INTERNET SERVICES

SKYPE

FACEBOOK

WINDOWS LIVE MESSENGER

EBAY

LAST.FM

FEEDS

WIDGETS

PLANET 3

LINK TO:

SET UP FACEBOOK WIDGET

FACEBOOK MESSAGES AND POKES

IMPORTING FACEBOOK CONTACTS

UPLOADING PHOTOS TO FACEBOOK



Q

HOME

MENU

BACK

NEXT

Icon	Icon description
F	New item / message / poke / friend request
*f	Pending items to be sent from you to others
≅f	Facebook is currently updating
f	Not logged in
Û	Posting to Facebook (Status bar)
	Logging in or downloading new content

(Status bar)

FACEBOOK ICONS

INTERNET SERVICES

SKYPE

FACEBOOK

WINDOWS LIVE MESSENGER

EBAY

LAST.FM

FEEDS

WIDGETS

PLANET 3

LINK TO:

SET UP FACEBOOK WIDGET

FACEBOOK MESSAGES AND POKES

IMPORTING FACEBOOK CONTACTS

UPLOADING PHOTOS TO FACEBOOK



WINDOWS LIVE™ MESSENGER

It's as easy to use Windows Live Messenger on your phone as it is on a computer. You can always be logged on, and you'll see new messages highlighted in the switcher and the status bar. Your Messenger contacts will be fully integrated in your Contacts.

SIGN IN

- Scroll to from the Home screen and press OK.
- Enter the email address and password you use for Messenger.

Within a few seconds you'll be able to import your buddies into the contacts book and start conversations.

SIGN OUT

From Windows LiveMessenger press OPTIONS> Sign out.

NOTE:

Windows Live Messenger service not available in all countries. Check with your network operator for more details.

INTERNET SERVICES

SKYPE

FACEBOOK

WINDOWS LIVE MESSENGER

EBAY

LAST.FM

FEEDS

WIDGETS

PLANET 3

LINK TO:

SENDING MESSAGES USING WINDOWS LIVE MESSENGER

IMPORTING WINDOWS LIVE MESSENGER CONTACTS



41

Windows Live Messenger Icons		
Icon	Icon description	
2	Away	
20	Blocked off	
20	Blocked on	
20	Busy	
8	Off line	
200	Off line mobile	
8	Messenger conversation	

INTERNET SERVICES

SKYPE

FACEBOOK

WINDOWS LIVE MESSENGER

EBAY

LAST.FM

FEEDS

WIDGETS

PLANET 3

LINK TO:

SENDING MESSAGES USING WINDOWS LIVE MESSENGER

IMPORTING WINDOWS LIVE MESSENGER CONTACTS



EBAY

Whenever you look at eBay on your mobile you'll see an up to date view as it automatically refreshes. You can receive outbid alerts and notifications that auctions you're watching are close to ending.

SIGN IN

- Scroll to en from the Home screen and select OK.
- Enter your eBay user ID and password.
- Within a few seconds your current Watches, buying and selling views will update.


SEARCH EBAY

 Select OPTIONS. This even remembers your previous 5 searches.

NOTE:

eBay service is not available in all countries. eBay service launches Quarter 1 2009.

Check with your network operator for more details.

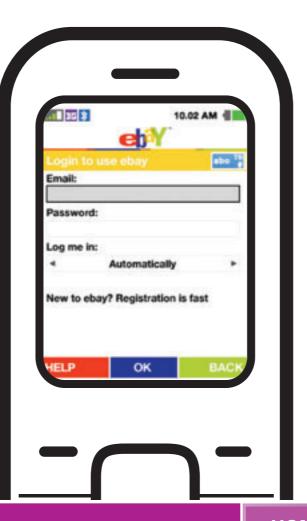

INTERNET SERVICES

SKYPE

FACEBOOK

WINDOWS LIVE MESSENGER

EBAY

LAST.FM

FEEDS

WIDGETS

PLANET 3

HOME

MENU

BACK

NEXT

LAST.FM

Last.fm is the world's leading free global music website, with a community of over 25 million passionate music fans. The 'scrobbling' function enables Last.fm to track what you listen to in real-time, and build you an online profile to store your music preferences. Last.fm can then recommend you new music based on your taste, as well as allowing your friends to see what you're into. And now you can scrobble from your mobile when you're listening to the music tracks you have stored on it.



INTERNET SERVICES

SKYPE

FACEBOOK

WINDOWS LIVE MESSENGER

EBAY

LAST.FM

FEEDS

WIDGETS

PLANET 3

3

NEXT

LAST.FM

SIGN IN

- Press from the Home screen > MUSIC> OPTIONS > Last.fm> Log in.
- This will appear in the status bar when the Last.fm application is scrobbling.

SIGN OUT

 Press from the Home screen > MUSIC. Select OPTIONS > Last.fm > Log out.

INTERNET SERVICES

SKYPE

FACEBOOK

WINDOWS LIVE MESSENGER

EBAY

LAST.FM

FEEDS

WIDGETS

PLANET 3

LINK TO:

PLAY MUSIC

3

45

HOME MENU

BACK

NEXT

Q

ск |

Feeds are basically a way of letting you know every time there's a change on a website you like, as long as it provides an RSS feed. That could mean updates on news, sports scores, entertainment gossip – whatever you're interested in. It's easy to choose a new feed and set it up. You can also set how often you want to be updated with any changes on the website.

ACCESS TO FEEDS

 Press from the Home screen, and select FEEDS.

ADD A FEED

- Press from the Home screen and select FEEDS.
- Select OPTIONS > Add a feed > OK.
- To add a web feed from your browser, look for the RSS icon . When you see it use the OPTIONS menu to add the feed.
- Alternatively, you can enter a feed URL manually and select ADD.

VIEW A FEED

- Press MENU from the Home screen and select FEEDS > VIEW or select OPTIONS > View feed.
- Select GO TO to go to the browser, where you'll see the full content of the website that sent the feed.

INTERNET SERVICES

ACCESS TO FEEDS

ADD A FEED

VIEW A FEED

UPDATE A FEED

MARK A FEED AS READ

ASSIGN A FEED TO CONTACTS

EDIT A FEED

DELETE A FEED

3

UPDATE A FEED

- Press from the Home screen and select FEEDS > OPTIONS > Update > Selected to update the single focus feed or select OPTIONS > Update > All to update the content of all feeds manually.
- While select OPTIONS > Set auto update to update the content of all feeds automatically. You can also set to auto update the feeds as Once an hour, Once a day, Once a week or Never.

MARK A FEED AS READ

- Press From the Home screen and select FEEDS > OPTIONS > Mark as read to mark the selected feed as read.
- To mark all feeds as read, select OPTIONS > Mark all as read.

ASSIGN A FEED TO CONTACTS

- Press From the Home screen and select FEEDS > MY FEEDS > OPTIONS > Assign feed to contact.
- Use (up) and (down) to select the desired contact and select MARK > DONE > YES to assign the feed to the contact.

INTERNET SERVICES

ACCESS TO FEEDS

ADD A FEED

VIEW A FEED

UPDATE A FEED

MARK A FEED AS READ

ASSIGN A FEED TO CONTACTS

EDIT A FEED

DELETE A FEED

3

EDIT A FEED

 Press from the Home screen and select FEEDS > OPTIONS > Edit.

DELETE A FEED

 Press from the Home screen and select FEEDS > OPTIONS > Delete feed > YES.

INTERNET SERVICES

ACCESS TO FEEDS

ADD A FEED

VIEW A FEED

UPDATE A FEED

MARK A FEED AS READ

ASSIGN A FEED TO CONTACTS

EDIT A FEED

DELETE A FEED

3

НОМЕ

MENU

BACK

NEXT

SET THE HOME SCREEN WIDGETS

With the widgets function, you can bring some of your most important internet services right to your desktop – things like the weather, RSS, Yahoo search, Clock, Google search.

- Press (up) from the Home screen and select Click to add widgets > ADD to add a widget directly. The phone has five preset widgets for you to select: RSS Widget, Clock Widget, Yahoo Search Widget, Weather Widget, Google Search Widget.
- On the Manage Widgets screen, use (up) or (down) to scroll to the desired widget, then press OK to select it, or you can select OPTIONS > Select widget, then click DONE and the widget will appear on the Home screen.
- To search for the desired widget, you can enter the

- widget name in the search bar until the widget is displayed. When you press a key, such as 2..., you will find widget names that begin with 'A', 'B' or 'C'. The next key you press continues to narrow the search.
- Or you can select OPTIONS
 > View widget to view the details of the selected widget or select OPTIONS
 > Delete widget > YES to delete it.

NOTE:

If the widget is showing on the Home screen, please deselect it at first before deleting it.

INTERNET SERVICES

SET THE HOME SCREEN WIDGETS

USING WEATHER WIDGETS

USING CLOCK WIDGETS

SET UP A FACEBOOK WIDGET

3

USING WEATHER WIDGETS

By supplying location information, you can view the weather forecast for 5 days or 2 days.

- After selecting Weather Widget on the Manage Widgets screen, the weather widget will appear on the Home screen. You can add a new weather location in the search bar, then click SEARCH, and the phone will display the related locations. Press OK, and the weather forecast of the selected location will shown on the screen.
- To add more locations, press OPTIONS > Add new location > OK, then add the additional location in the search bar and click SEARCH. The weather information of the additional location will also be shown on the screen. Press (left) or (right) to switch between the different locations.
- To remove the unwanted location, when the weather forecast of the selected location displays on the screen. Press OPTIONS > Remove this location > OK.

INTERNET SERVICES

SET THE HOME SCREEN WIDGETS

USING WEATHER WIDGETS

USING CLOCK WIDGETS

SET UP A FACEBOOK WIDGET

3

USING CLOCK WIDGETS

With the clock widget, you can adjust the time and date, add or remove time zone, set the alarm and clock, etc.

- To set an alarm, after selecting Clock Widget on the Manage widget screen, the clock widget will appear on the Home screen. Select the clock widget and click OPTIONS > Alarm, scroll to Alarm1. Press OK to set your alarm. After setting, select SAVE. Click Cancel all to turn off the alarm function.
- To adjust the time and date, highlight the clock widget from the Home screen and click OPTIONS > Adjust time and date, then enter the date and time and select the desired time format and date format. After editing, select SAVE.
- To add a time zone, highlight the clock widget from the Home screen and select OPTIONS > Add time zone. then use (up) or (down) to select the desired location or you can enter the location name in the search bar until the location is displayed. Click ADD > OK, and the time of the selected location will display on the Home screen. To add more time zones, repeat this step and use (left) or (right) to switch between different time zones.

INTERNET SERVICES

SET THE HOME SCREEN WIDGETS

USING WEATHER WIDGETS

USING CLOCK WIDGETS

SET UP A FACEBOOK WIDGET

CONTINUE -->

3

51

INTERNET SERVICES

- To remove a time zone, highlight the clock widget from the Home screen and use (left) or (right) to scroll to the desired time zone, then click OPTIONS > Remove time zone.
- To set a clock, highlight the clock widget from the Home screen and click OPTIONS
 > Analogue Clock/Digital Clock and press OK.

SET UP A FACEBOOK WIDGET

You can set Facebook to appear on your mobile's Home screen, allowing you to see updates as they happen. **SET THE HOME SCREEN WIDGETS**

USING WEATHER WIDGETS

USING CLOCK WIDGETS

SET UP A FACEBOOK WIDGET

LINK TO:

FACEBOOK

3

PLANET 3

From planet 3 you can...

Watch music videos and goals, play games and much more. It's free to browse and we'll tell you how much they cost before you download them.



Email & Social Networks - Meet friends, chat, or check out each other's pics and videos with applications such as Eyevibe.



Music - Fill your phone with tracks galore at the 3MusicStore.



News & Info – Keep up with what's going down. Get the news from ITN, the BBC and others, as well as weather, horoscopes, magazines and more.



Games & Puzzles - Whether it's brain (s)training, old arcade favourites or all-action adrenaline fests - we've got the latest releases.



Sport – All the action across all the major sports, with updates from Sky Sports, Football365, the BBC and many others.



Entertainment - Find out what's on at the cinema, or watch your favourite TV from the BBC, ITV, MTV, Kerrang, Kiss and loads of others on your mobile.

CONTINUE -->

INTERNET SERVICES

SKYPE

FACEBOOK

WINDOWS LIVE MESSENGER

EBAY

LAST.FM

FEEDS

WIDGETS

PLANET 3

NOTE:

Some services are not available in all countries. Check with your network operator for more details.



53

HOME MENU BACK

PLANET 3



Restricted – If you're over 18, this is where you can access adult entertainment, gambling, horror and adult comedy.



Travel & Guides – Where to go to keep an eye on the jams, check your directions, pick the place to meet your mates, or even book a cab or a holiday.



Personalise & Downloads – loads of useful links, to Dialtunes, Realtunes, Pix, all sorts of applications and loads more. Everything you need to help you get your mobile looking and working just the way you like it.



Shopping & Lifestyle – lets you put in or check bids on eBay, order CDs and stuff on Amazon, look for a new job or even a new home, and generally keep your life ticking along.

All this plus news, showbiz, movie trailers, comedy and more through planets.

INTERNET SERVICES

SKYPE

FACEBOOK

WINDOWS LIVE MESSENGER

EBAY

LAST.FM

FEEDS

WIDGETS

PLANET 3



EMAIL ON 3

Email on 3 pushes all your emails straight to your phone – personal and work. Compatible with almost any email service, including Microsoft Hotmail, Google Mail and Yahoo! Mail, as well as most corporate work email systems (Microsoft Exchange and Lotus Domino). Add up to 7 email accounts – never miss that important email again. Set up push schedules, so you're in control of your email, instead of it being in control of you.

NOTE:

Email on 3 is not available in all countries. Check with your network operator for more details.

INTERNET SERVICES

SKYPE

FACEBOOK

WINDOWS LIVE MESSENGER

EBAY

LAST.FM

FEEDS

WIDGETS

PLANET 3

3

Right. Let's get some basic functions sorted out.

Making and receiving calls is as easy as you'd expect. Conference calls, Caller ID, Call Divert... take a look at the list right for the complete picture.

CALLS

MAKE VOICE AND VIDEO CALLS

MAKE A CALL FROM CONTACTS

MAKE SKYPE-TO-SKYPE CALLS

MAKE EMERGENCY CALLS

RECEIVE CALLS

REJECT A CALL

END A CALL

CONFERENCE CALLS

MAKE A CALL FROM CALL LOG

CALL DIVERT

CALL FEATURES

SHOW MY NUMBER

VIDEO CALL SETTINGS

CALL LOG

3

56

BACK

NEXT

MAKE VOICE AND VIDEO CALLS

To make a call from the Home screen:

- Enter the phone number.
- Press to make a voice call.
- Select OPTIONS > Video call > OK for a video call.

MAKE A CALL FROM CONTACTS

- Press (down).
- Scroll to your preferred contact and press for voice call.
- Scroll to your preferred contact and select OPTIONS > Call > Video call > OK for a video call.

MAKE SKYPE-TO-SKYPE **CALLS**

- Scroll to is from the Home screen and press OK.
- Scroll to your preferred contact.
- Press for Skype-to-Skype calls.

MAKE EMERGENCY CALLS

Enter the appropriate emergency number for your location then press

RECEIVE CALLS

To answer a call press

CALLS

MAKE VOICE AND VIDEO CALLS

MAKE A CALL FROM CONTACTS

MAKE SKYPE-TO-SKYPE CALLS

MAKE EMERGENCY CALLS

RECEIVE CALLS

REJECT A CALL

END A CALL

CONFERENCE CALLS

MAKE A CALL FROM CALL LOG

CALL DIVERT

CALL FEATURES

SHOW MY NUMBER

VIDEO CALL SETTINGS

CALL LOG

LINK TO:

SET UP SKYPE

ADD A SKYPE CONTACT

IMPORT A SKYPE CONTACT



REJECT A CALL

Press _____.

END A CALL

Press to end a call.

CONFERENCE CALLS

While on a call, you can make another call or receive a second call and talk with up to three people at the same time.

- Enter the second number and press to make another call.
- Press OPTIONS > Conference.

MAKE A CALL FROM CALL LOG

- Press from the Home screen and scroll to your preferred contact.
- Press for a voice call.

CALL DIVERT

Lets you transfer incoming voice and video calls to a specified number. For video calls, it must be to another video mobile number.

- Press MENU.
- Select SETTINGS > Advanced > Calls.

CALLS

MAKE VOICE AND VIDEO CALLS

MAKE A CALL FROM CONTACTS

MAKE SKYPE-TO-SKYPE CALLS

MAKE EMERGENCY CALLS

RECEIVE CALLS

REJECT A CALL

END A CALL

CONFERENCE CALLS

MAKE A CALL FROM CALL LOG

CALL DIVERT

CALL FEATURES

SHOW MY NUMBER

VIDEO CALL SETTINGS

CALL LOG



NEXT 58

CALL FEATURES

During a call select Options to access the following features:

- Hold: select to place the caller you are talking to on hold. Select Retrieve to remove the call from hold.
- Mute: select to turn off the microphone so that you can hear the caller but the caller cannot hear you. Select Mute off to switch on the microphone again.
- Call log: select to view your call log list.
- Contacts: select to view your Contacts list.
- Messages: select to access the Messages menu.

SHOW MY NUMBER

Enables you to choose whether your mobile number will be hidden or not during a call.

- Press MENU.
- Select SETTINGS >
 Advanced > Calls > Call
 settings > Show my number.

CALLS

MAKE VOICE AND VIDEO CALLS

MAKE A CALL FROM CONTACTS

MAKE SKYPE-TO-SKYPE CALLS

MAKE EMERGENCY CALLS

RECEIVE CALLS

REJECT A CALL

END A CALL

CONFERENCE CALLS

MAKE A CALL FROM CALL LOG

CALL DIVERT

CALL FEATURES

SHOW MY NUMBER

VIDEO CALL SETTINGS

CALL LOG

3

VIDEO CALL SETTINGS

Enables you to change settings for video calls.

- Press and select
 SETTINGS > Advanced >
 Calls > Video call settings.
- My video size: allows you to set the size for your own video. You can choose either large or small.
- My video position: allows you to set the position of your image on the display. You can choose either left or right.
- Hide my video: allows you to choose whether to display your own video on the screen.
- Block my video: enables you to allow or stop the sending of your own video to the other party.

CALLS

MAKE VOICE AND VIDEO CALLS

MAKE A CALL FROM CONTACTS

MAKE SKYPE-TO-SKYPE CALLS

MAKE EMERGENCY CALLS

RECEIVE CALLS

REJECT A CALL

END A CALL

CONFERENCE CALLS

MAKE A CALL FROM CALL LOG

CALL DIVERT

CALL FEATURES

SHOW MY NUMBER

VIDEO CALL SETTINGS

CALL LOG



HOME

MENU

BACK

NEXT

CALL LOG

To view call log:

From the Home screen, press

From the call log you have a number of options available. Choose your preferred contact, and select OPTIONS to access any of the following:

Options	Functions
View detail	Displays the status, time, name, number and picture (the picture will be displayed only when the number has been saved in the contacts and assigned the picture to the number) of this call.
Call	Makes a voice or video call to the selected number.
Send message	Send a message or an email to the selected number.
Skype	Skype call or Skype chat to the selected number.
Create contact	Creates a new contact, and the contact will be added to the Contact list automatically.
Add to contact	Adds the number to the contact which has been saved in Contact list.
Delete	Deletes the selected contact from the list.
Delete all	Deletes all contacts in current list.

 Press (left) or (right) to switch between ALL CALLS / MISSED / DIALLED / ANSWERED / MOST USED. MAKE VOICE AND VIDEO CALLS

MAKE A CALL FROM CONTACTS

MAKE SKYPE-TO-SKYPE CALLS

MAKE EMERGENCY CALLS

RECEIVE CALLS

REJECT A CALL

END A CALL

CALLS

CONFERENCE CALLS

MAKE A CALL FROM CALL LOG

CALL DIVERT

CALL FEATURES

SHOW MY NUMBER

VIDEO CALL SETTINGS

CALL LOG

3

HOME MENU

BACK

NEXT

Get connected – by text, Skype, email, Facebook and Windows Live Messenger

How do you like to keep in contact? It's all here. Whether you prefer texting, Skype calls, email, Facebook or Windows Live Messenger. Or all of them!

TEXT, CHAT, MULTIMEDIA AND EMAIL

TEXT MESSAGES

SKYPE CHAT

MULTI CHAT

CREATE A NEW MULTIMEDIA MESSAGE

TAKE A PICTURE OR VIDEO AND SEND IT

SET UP YOUR EMAIL

WRITE AN EMAIL MESSAGE

ENABLE TEXT SELECTION

SEND A FACEBOOK MESSAGES

POKE A FRIEND

UPLOAD PHOTOS TO FACEBOOK

SEND MESSAGES USING WINDOWS LIVE MESSENGER

3

NEXT

TEXT MESSAGES

- Press MENU from the Home screen and select MESSAGES and select New > Message.
- Enter the mobile number at To(1) or press CONTACTS to select preferred contact.
- Select Message and write the message. Select SEND to send the message.

SKYPE CHAT

- Scroll to screen and press OK.
- Scroll to select the preferred Skype contact, then select Options > Start chat.
- Write your message and select Send.

You can view your Skype chat log by pressing from the Home screen. Select MESSAGES > Chats.

Skype chat is a network dependent feature.

MULTI CHAT

To add participants to a chat select Options > Add participants and select from the list.

TEXT, CHAT, MULTIMEDIA AND EMAIL

TEXT MESSAGES

SKYPE CHAT

MULTI CHAT

CREATE A NEW MULTIMEDIA MESSAGE

TAKE A PICTURE OR VIDEO AND SEND IT

SET UP YOUR EMAIL

WRITE AN EMAIL MESSAGE

ENABLE TEXT SELECTION

SEND A FACEBOOK MESSAGES

POKE A FRIEND

UPLOAD PHOTOS TO FACEBOOK

SEND MESSAGES USING WINDOWS LIVE MESSENGER



CREATE A NEW MULTIMEDIA MESSAGE

- Press from the Home screen and select MESSAGES > New > Message.
- Enter the mobile number or email address at To(1).
 Select Message > OPTIONS > Insert picture / video / sound and select a file.
 Select SEND to send the message.

TAKE A PICTURE OR VIDEO AND SEND IT

- From Home screen press on the right of your mobile.
- Select OPTIONS > Capture mode to switch between camera and video mode.
- Select BACK and press
 to take photo or to start
 video recording, and select
 STOP to stop video
 recording.
- Select SEND to send the message and follow the menu.

TEXT, CHAT, MULTIMEDIA AND EMAIL

TEXT MESSAGES

SKYPE CHAT

MULTI CHAT

CREATE A NEW MULTIMEDIA MESSAGE

TAKE A PICTURE OR VIDEO AND SEND IT

SET UP YOUR EMAIL

WRITE AN EMAIL MESSAGE

ENABLE TEXT SELECTION

SEND A FACEBOOK MESSAGES

POKE A FRIEND

UPLOAD PHOTOS TO FACEBOOK

SEND MESSAGES USING WINDOWS LIVE MESSENGER

3

SET UP YOUR EMAIL

- Press MENU and select Messages > Email on 3 and press OK.
- Select Next to get started.
- Select the email service you want to use with Email on 3 – Hotmail, Google Mail or Yahoo! Mail.
- Select your chosen service, enter your username and password.

WORK EMAIL

- For work emails, choose whether you want to use Outlook Web Access or a Workplace Connector.
- If you choose OWA, simply enter the address you use for your OWA service then the username and password you use to login.

 If your work doesn't offer OWA, then you'll need to download a separate application called a Workplace Connector.
 Follow the instructions on screen to do this.

OTHER EMAIL SERVICES

 If you use a different email service from those mentioned, then select More.

You may need some details from your email provider, such as POP / IMAP server address. You can easily get these from your provider, usually from their website.

 Enter your email address and login details.

Remember you can add up to seven email accounts using Email on 3.

TEXT, MULTIMEDIA, EMAIL AND SKYPE CHAT

TEXT MESSAGES

SKYPE CHAT

MULTI CHAT

CREATE A NEW MULTIMEDIA MESSAGE

TAKE A PICTURE OR VIDEO AND SEND IT

SET UP YOUR EMAIL

WRITE AN EMAIL MESSAGE

ENABLE TEXT SELECTION

SEND A FACEBOOK MESSAGES

POKE A FRIEND

UPLOAD PHOTOS TO FACEBOOK

SEND MESSAGES USING WINDOWS LIVE MESSENGER

3

WRITE AN EMAIL MESSAGE

- Press MENU and select EmailEmail on 3 > OK.
- Select the account from which you want to send an email and press Action.

You can either respond to an existing email, or send a new email.

 Enter the recipient's email address, subject and the text of your email then press Send.

NOTE:

Email on 3 is not available in all countries. Check with your network operator for more details.

TEXT, MULTIMEDIA, EMAIL AND SKYPE CHAT

TEXT MESSAGES

SKYPE CHAT

MULTI CHAT

CREATE A NEW MULTIMEDIA MESSAGE

TAKE A PICTURE OR VIDEO AND SEND IT

SET UP YOUR EMAIL

WRITE AN EMAIL MESSAGE

ENABLE TEXT SELECTION

SEND A FACEBOOK MESSAGES

POKE A FRIEND

UPLOAD PHOTOS TO FACEBOOK

SEND MESSAGES USING WINDOWS LIVE MESSENGER



ENABLE TEXT SELECTION

While viewing a text message, multimedia message, email or browser page, you can activate the hyperwords function, and text can be copied, shared or pasted into other applications. Take viewing a text message for example.

- Press MENU from the Home screen and select Web Browser.
- Go to any page and select OPTIONS > Hyperwords > Once only or OPTIONS > Hyperwords > Always on.
- Move the cursor to the text you want to copy, select START, then press and hold
 (up/down/left/right navigation key).
- After selecting, select STOP.

Select Search to search for the same text on Google Maps, on Google, on Amazon, on eBay or references, or you can select Paste to paste the selected text on other applications, such as Message, Email, Notepad, Calendar to do or Calendar event.

TEXT, CHAT, MULTIMEDIA, AND EMAIL

TEXT MESSAGES

SKYPE CHAT

MULTI CHAT

CREATE A NEW MULTIMEDIA MESSAGE

TAKE A PICTURE OR VIDEO AND SEND IT

SET UP YOUR EMAIL

WRITE AN EMAIL MESSAGE

ENABLE TEXT SELECTION

SEND A FACEBOOK MESSAGES

POKE A FRIEND

UPLOAD PHOTOS TO FACEBOOK

SEND MESSAGES USING WINDOWS LIVE MESSENGER



SEND A FACEBOOK MESSAGE

- Scroll to from the Home screen and press OK. Select Friends > then select the friend you wish to contact.
- Select Options > Send Message.

POKE A FRIEND

- Scroll to from the Home screen and press OK. Select Friends > then select the friend you wish to poke.
- Select Options > Poke.

TEXT, CHAT, MULTIMEDIA, **AND EMAIL**

TEXT MESSAGES

SKYPE CHAT

MULTI CHAT

CREATE A NEW MULTIMEDIA MESSAGE

TAKE A PICTURE OR VIDEO AND SEND IT

SET UP YOUR EMAIL

WRITE AN EMAIL MESSAGE

ENABLE TEXT SELECTION

SEND A FACEBOOK MESSAGES

POKE A FRIEND

UPLOAD PHOTOS TO FACEBOOK

SEND MESSAGES USING WINDOWS LIVE MESSENGER

LINK TO:

FACEBOOK SECTION

IMPORT FACEBOOK CONTACTS



68 MENU BACK **NEXT** HOME

UPLOAD PHOTOS TO FACEBOOK FROM CAMERA

 Take a picture, select Send, scroll down to Facebook and select OK. Your photo will be sent to Facebook.

FROM MY STUFF

 Browse to the photo that you want to send to Facebook, select OPTIONS
 Send as > Facebook and select OK.

TEXT, CHAT, MULTIMEDIA, AND EMAIL

TEXT MESSAGES

SKYPE CHAT

MULTI CHAT

CREATE A NEW MULTIMEDIA MESSAGE

TAKE A PICTURE OR VIDEO AND SEND IT

SET UP YOUR EMAIL

WRITE AN EMAIL MESSAGE

ENABLE TEXT SELECTION

SEND A FACEBOOK MESSAGES

POKE A FRIEND

UPLOAD PHOTOS TO FACEBOOK

SEND MESSAGES USING WINDOWS LIVE MESSENGER

LINK TO:

FACEBOOK SECTION

IMPORT FACEBOOK CONTACTS



Q

HOME

MENU

BACK

NEXT

SEND MESSAGES USING WINDOWS LIVE MESSENGER FROM CONTACTS

From the contacts book you can select a Windows Live Messenger contact, then select OPTIONS > Messenger > Chat.

FROM WINDOWS LIVE MESSENGER

 Scroll to screen and press OK. Scroll to a chosen contact and select OK.

TEXT, CHAT, MULTIMEDIA, AND EMAIL

TEXT MESSAGES

SKYPE CHAT

MULTI CHAT

CREATE A NEW MULTIMEDIA MESSAGE

TAKE A PICTURE OR VIDEO AND SEND IT

SET UP YOUR EMAIL

WRITE AN EMAIL MESSAGE

ENABLE TEXT SELECTION

SEND A FACEBOOK MESSAGES

POKE A FRIEND

UPLOAD PHOTOS TO FACEBOOK

SEND MESSAGES USING WINDOWS LIVE MESSENGER

LINK TO:

WINDOWS LIVE MESSENGER SECTION

IMPORTING WINDOWS LIVE MESSENGER CONTACTS



NEXT

HOME MENU BACK

What's everyone up to.

Imagine that your address book came alive and told you what your friends were up to and when they were online. That's what's your INQ Contacts can do. Instead of a static list you've got a live, constantly updating part of your phone. Information is pulled from Skype, Facebook and Windows Live Messenger to let you know who's online, what people are up to, what's going on.

CONTACTS

UNDERSTANDING THE CONTACTS SCREEN

ADD A CONTACT

ACCESS CONTACTS

EDIT A CONTACT

DELETE A CONTACT

ADD A PHOTO TO A CONTACT

COPY A CONTACT BETWEEN USIM AND MOBILE

COPY CONTACTS BETWEEN USIM AND MOBILE

ADD A SKYPE CONTACT


IMPORT YOUR SKYPE CONTACTS

IMPORT YOUR FACEBOOK CONTACTS

IMPORT YOUR WINDOWS LIVE MESSENGER CONTACTS

MERGE CONTACTS



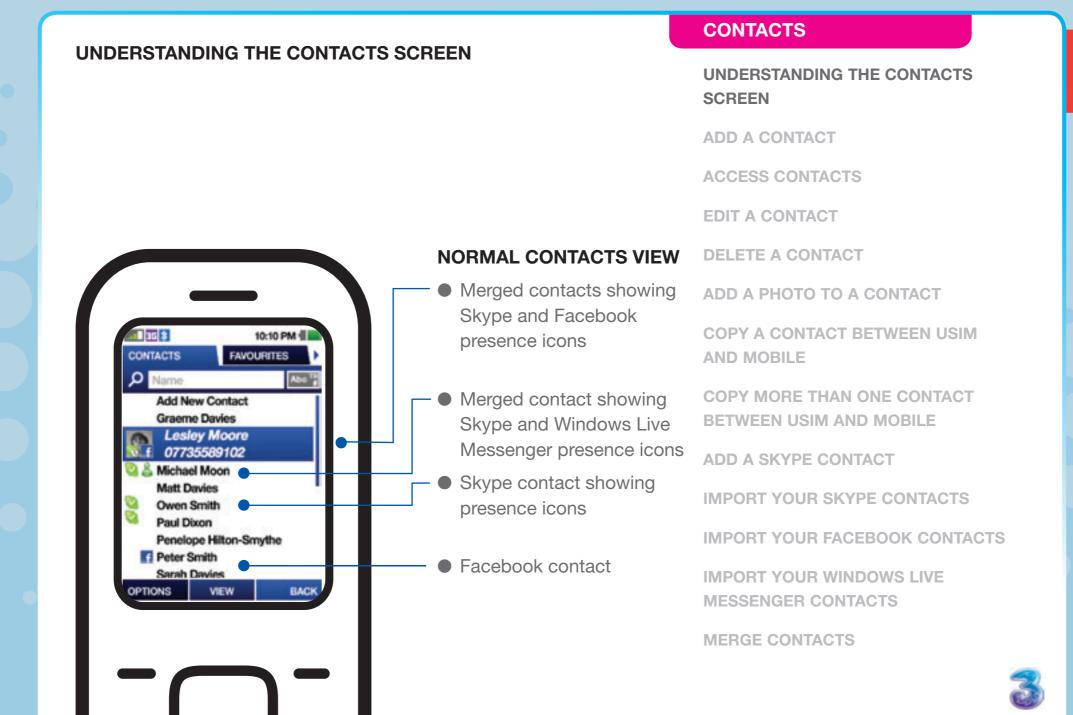

ADD A CONTACT

- Enter a contact number from the Home screen and select OPTIONS > Create contact.
- Enter name and other details and select SAVE.

ACCESS CONTACTS

- Press (down) from the Home screen.
- Scroll to the desired contact and select VIEW.

EDIT A CONTACT

Q

- Press (down) from the Home screen.
- Select OPTIONS > Manage contacts > Edit to edit your contact and then press SAVE.

DELETE A CONTACT

- Press (down) from the Home screen.
- Scroll to the contact and press > Yes to delete the contact.

ADD A PHOTO TO A CONTACT

You can add a photo to a contact stored on the mobile (not on your USIM card).

- Press (down) from the Home screen.
- Scroll to highlight the desired contact, select OPTIONS > Manage contacts > Edit.
- Scroll to Picture > OPTIONS
 > From pictures and select
 your preferred image or
 Picture > OPTIONS > New
 photo to take a photo. Press
 OK to save the setting.

CONTACTS

UNDERSTANDING THE CONTACTS SCREEN

ADD A CONTACT

ACCESS CONTACTS

EDIT A CONTACT

DELETE A CONTACT

ADD A PHOTO TO A CONTACT

COPY A CONTACT BETWEEN USIM AND MOBILE

COPY MORE THAN ONE CONTACT BETWEEN USIM AND MOBILE

ADD A SKYPE CONTACT

IMPORT YOUR SKYPE CONTACTS

IMPORT YOUR FACEBOOK CONTACTS

IMPORT YOUR WINDOWS LIVE MESSENGER CONTACTS

MERGE CONTACTS

3

73

COPY A CONTACT BETWEEN USIM AND MOBILE

- Press (down) from the Home screen.
- Scroll to the desired contact and select Options > Manage Contacts > Move > Copy to your USIM / Copy to your phone. In this case, only one contact will be moved / copied at the same time.

COPY MORE THAN ONE CONTACT BETWEEN USIM AND MOBILE

- Press (down) from the Home screen.
- Select Options > Manage
 Contacts > Mark > Mark all
 or Mark > Options > Move >
 Copy to your USIM / Copy
 to your phone.

ADD A SKYPE CONTACT

- Scroll to S from the Home screen and press OK.
- Select Options > Add a contact to enter the contact's Skype name and select Save.

IMPORT YOUR SKYPE CONTACTS

You can save your Skype contacts onto your mobile along with your other contacts.

- Press (down) from the Home screen.
- Select OPTIONS > Skype > Get contacts from Skype.

CONTACTS

UNDERSTANDING THE CONTACTS SCREEN

ADD A CONTACT

ACCESS CONTACTS

EDIT A CONTACT

DELETE A CONTACT

ADD A PHOTO TO A CONTACT

COPY A CONTACT BETWEEN USIM AND MOBILE

COPY MORE THAN ONE CONTACT BETWEEN USIM AND MOBILE

ADD A SKYPE CONTACT

IMPORT YOUR SKYPE CONTACTS

IMPORT YOUR FACEBOOK CONTACTS

IMPORT YOUR WINDOWS LIVE MESSENGER CONTACTS

MERGE CONTACTS

LINK TO:

SET UP SKYPE

SKYPE CALLS



IMPORT YOUR FACEBOOK CONTACTS

When logging into Facebook for the first time you are presented with an option to import your Facebook contacts into the Contact book. If you press OK all your Facebook friends will be imported into your contacts book. If there is not enough room left in your contacts book for all your friends you will be given the option to choose who you would like to import.

TO IMPORT YOUR FRIENDS AT A LATER DATE

 Select Friends from the Facebook application and press (right) to the Mobile Friends tab. Select Edit mobile friends to import your contacts book.

CONTACTS

UNDERSTANDING THE CONTACTS SCREEN

ADD A CONTACT

ACCESS CONTACTS

EDIT A CONTACT

DELETE A CONTACT

ADD A PHOTO TO A CONTACT

COPY A CONTACT BETWEEN USIM AND MOBILE

COPY MORE THAN ONE CONTACT BETWEEN USIM AND MOBILE

ADD A SKYPE CONTACT

IMPORT YOUR SKYPE CONTACTS

IMPORT YOUR FACEBOOK CONTACTS

IMPORT YOUR WINDOWS LIVE MESSENGER CONTACTS

MERGE CONTACTS

LINK TO:

FACEBOOK

FACEBOOK MESSAGES AND POKES



HOME

MENU

BACK

IMPORT YOUR WINDOWS LIVE MESSENGER CONTACTS

When logging into Windows Live Messenger for the first time you are presented with an option to import Windows Live Messenger contacts into the Contact book. If you press OK all your Windows Live Messenger friends will be imported into your contacts book. If there is not enough room left in your contacts book for all your friends you will be given the option to choose who you would like to import.

CONTACTS

UNDERSTANDING THE CONTACTS SCREEN

ADD A CONTACT

ACCESS CONTACTS

EDIT A CONTACT

DELETE A CONTACT

ADD A PHOTO TO A CONTACT

COPY A CONTACT BETWEEN USIM AND MOBILE

COPY MORE THAN ONE CONTACT BETWEEN USIM AND MOBILE

ADD A SKYPE CONTACT

IMPORT YOUR SKYPE CONTACTS

IMPORT YOUR FACEBOOK CONTACTS

IMPORT YOUR WINDOWS LIVE MESSENGER CONTACTS

MERGE CONTACTS

LINKS TO:

WINDOWS LIVE MESSENGER SECTION

MESSAGING USING WINDOWS LIVE MESSENGER



NEXT

MERGE CONTACTS

Combine your friends' accounts for Skype, Windows Live Messenger or Facebook with their address book details.

- Press (down) from the Home screen.
- Make sure you're in the CONTACT LIST tab, otherwise press (right) to get there.
- Select Options > Merge Contacts.
- Mark the contact whose name you want to keep.
 Then mark their other accounts too. Select DONE > YES to Flnish, or DONE > NO to continue to merge another contact.

CONTACTS

UNDERSTANDING THE CONTACTS SCREEN

ADD A CONTACT

ACCESS CONTACTS

EDIT A CONTACT

DELETE A CONTACT

ADD A PHOTO TO A CONTACT

COPY A CONTACT BETWEEN USIM AND MOBILE

COPY MORE THAN ONE CONTACT BETWEEN USIM AND MOBILE

ADD A SKYPE CONTACT

IMPORT YOUR SKYPE CONTACTS

IMPORT YOUR FACEBOOK CONTACTS

IMPORT YOUR WINDOWS LIVE MESSENGER CONTACTS

MERGE CONTACTS





INQMOBILE.COM

Let's play.

Take pictures, play music, record videos or pick from a stunning choice of games. The media centre is where you'll find a whole array of entertaining stuff that your mobile can do for you.

MEDIA AND GAME CENTRE

PLAY MUSIC

TAKE PHOTOS OR MAKE VIDEO CLIPS

VIEW YOUR PHOTOS OR VIDEO CLIPS

ACCESS GAMES AND APPS

DOWNLOAD GAMES AND APPS

PLAY MUSIC

- Press From the Home screen.
- Select MUSIC > Artist, Album, Track, Recently added, etc.



MEDIA AND GAME CENTRE

PLAY MUSIC

TAKE PHOTOS OR MAKE VIDEO CLIPS

VIEW YOUR PHOTOS OR VIDEO CLIPS

ACCESS GAMES AND APPS

DOWNLOAD GAMES AND APPS

3

 
HOME MENU

BACK


PLAY MUSIC

The icons are:

Icon Functions



- Shuffle play.
 - Press (down) to play the next file.
- Press (up) to play the previous file.
- Press to switch between Play and Pause.
 - Press (left) to fast reverse.
 - Press (right) to fast forward.

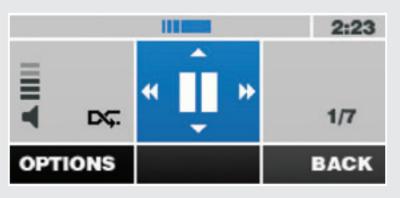

MEDIA AND GAME CENTRE

PLAY MUSIC

TAKE PHOTOS OR MAKE VIDEO CLIPS

VIEW YOUR PHOTOS OR VIDEO CLIPS

ACCESS GAMES AND APPS

DOWNLOAD GAMES AND APPS

LINK TO:

LAST.FM

MENU



НОМЕ

BACK

NEXT

TAKE PHOTOS OR MAKE VIDEO CLIPS

- From the Home screen, press on the right of your mobile.
- Select OPTIONS > Capture mode to switch between camera and video mode.
- Select BACK and press to take a photo or to start video recording, and select STOP or Camera key to stop video recording.
- For additional camera features, select OPTIONS by pressing the left soft key.

VIEW YOUR PHOTOS OR VIDEO CLIPS

- Press MENU.
- Select MY STUFF > Photos
 to view photos or MY
 STUFF > Movies > Video rec
 to view movies.
- Select your preferred picture or video clips and press OK to view or play.

MEDIA AND GAME CENTRE

PLAY MUSIC

TAKE PHOTOS OR MAKE VIDEO CLIPS

VIEW YOUR PHOTOS OR VIDEO CLIPS

ACCESS GAMES AND APPS

DOWNLOAD GAMES AND APPS

LINK TO:

UPLOADING PICTURES TO FACEBOOK

TAKE A PICTURE OR VIDEO AND SEND IT

3

81

CK NEXT

ACCESS GAMES AND APPS

Your mobile supports Java so you can download games from Planet 3 Games, and play them on your mobile.

Press MENU and select
 GAMES AND APPS.

DOWNLOAD GAMES AND APPS

Select Homepage to access and download new applications and games for your mobile.

MEDIA AND GAME CENTRE

PLAY MUSIC

TAKE PHOTOS OR MAKE VIDEO CLIPS

VIEW YOUR PHOTOS OR VIDEO CLIPS

ACCESS GAMES AND APPS

DOWNLOAD GAMES AND APPS

3

Those useful extras.

Your mobile has a bunch of useful extra features, including a Calendar with alarm to remind you of specific appointments, alarm clock and a way to lock your mobile.

EXTRA FEATURES AND SECURITY

SET AN ALARM

CALENDAR

CALCULATOR

ACTIVATE AND CHANGE YOUR USIM PIN

CHANGE YOUR USIM PIN

NETWORK SETTINGS

MASTER RESET

LANGUAGE

HOME

BACK

NEXT

83

Q

MENU

SET AN ALARM

You can set the music you wish to wake up to as well as the volume, and it will even ring when the phone is set to silent or turned off.

- Press MENU.
- Scroll to select ALARM > Alarm1. Press OK to set your alarm.
- After setting, select SAVE.

EXTRA FEATURES AND SECURITY

SET AN ALARM

CALENDAR

CALCULATOR

ACTIVATE AND CHANGE YOUR USIM PIN

CHANGE YOUR USIM PIN

NETWORK SETTINGS

MASTER RESET

LANGUAGE

Q

HOME

MENU

BACK

CALENDAR

You can use the calendar to keep track of important meetings.

To create a new event/task:

- Press MENU.
- Scroll to select TOOLS > Calendar.
- Scroll to your preferred date. Press VIEW and select YES to create a new calendar entry.
- Select New event / New to do > OK.
- Enter the details and select SAVE.

CALCULATOR

To use the calculator:

- Press MENU.
- Scroll to select TOOLS > Calculator.
- Use to Add, Multiply,
 Divide or Subtract and to
 select Equals. Press to
 delete a number and for decimal point.

EXTRA FEATURES AND SECURITY

SET AN ALARM

CALENDAR

CALCULATOR

ACTIVATE AND CHANGE YOUR USIM PIN

CHANGE YOUR USIM PIN

NETWORK SETTINGS

MASTER RESET

LANGUAGE

3



CHANGE YOUR USIM PIN

Your PIN (Personal Identification Number) code protects the information stored on your USIM.

To activate your USIM PIN:

ACTIVATE AND CHANGE

YOUR USIM PIN

- Press MENU.
- Scroll to select Settings > Advanced > Security settings > Activate PIN > Enable.
- Enter the default PIN 0000, and press OK.

Once you have activated your PIN, each time you turn on your mobile, you'll need to enter your PIN.

- Press MENU.
- Scroll to select SETTINGS > Advanced > Security settings > Change PIN.
- Enter your default PIN (0000), press OK and enter your new PIN (4-8 digit) twice.
- Select OK to save the setting.

Caution

- If you enter an incorrect PIN code three times in succession, your USIM and mobile functions will be locked. For more details, please refer to SAFETY AND MAINTENANCE.
- If you do not know the correct PIN code and PUK code, please contact your operator or network service provider.

EXTRA FEATURES AND SECURITY

SET AN ALARM

CALENDAR

CALCULATOR

ACTIVATE AND CHANGE YOUR USIM PIN

CHANGE YOUR USIM PIN

NETWORK SETTINGS

MASTER RESET

LANGUAGE

Q

HOME

MENU

BACK

NETWORK SETTINGS

You can also manually select the network you wish to be on when travelling abroad.

- Press MENU.
- Scroll to select SETTINGS > Network settings > Search > Manual.
- Select your preferred network and press SELECT.

MASTER RESET

The Master reset function enables you to reset your mobile back to the factory settings.

- Press MENU from the Home screen.
- Scroll to select SETTINGS > Advanced > Master reset.
- Enter the default handset code 0000 and press OK.

Press to mark the preferred menu, then select OPTIONS > Reset > YES to reset the marked settings. To reset all factory settings, select OPTIONS > Reset all > Yes.

For more details about master reset settings, select OPTIONS > Guide.

You can change this code by:

● Press MENU > SETTINGS > Advanced > Security settings > Lock your phone > Change your code.

EXTRA FEATURES AND SECURITY

SET AN ALARM

CALENDAR

CALCULATOR

ACTIVATE AND CHANGE YOUR USIM PIN

CHANGE YOUR USIM PIN

NETWORK SETTINGS

MASTER RESET

LANGUAGE

Q

HOME

MENU

BACK

NEXT

LANGUAGE

This function allows you to choose the language for the display of your mobile. Several options are available.

- Press MENU.
- Scroll to select SETTINGS> Advanced > Languagesettings > Language.
- Press (up) or (down) to select the preferred language and select OK.

EXTRA FEATURES AND SECURITY

SET AN ALARM

CALENDAR

CALCULATOR

ACTIVATE AND CHANGE YOUR USIM PIN

CHANGE YOUR USIM PIN

NETWORK SETTINGS

MASTER RESET

LANGUAGE

3

Q

HOME

MENU

BACK

NEXT

How to get connected.

Keep track of your appointments and updates of your contacts by copying them to your PC and connect to your friends' mobiles with Bluetooth®.

CONNECTIVITY SETTINGS

CONNECT WITH A BLUETOOTH HEADSET

TRANSFER FILES FROM YOUR MOBILE USING BLUETOOTH

TRANSFER FILES BETWEEN YOUR MOBILE AND PC

PC SYNCHRONISATION

CONNECT WITH A BLUETOOTH® HEADSET

Before making calls with a Bluetooth® headset, you must first set up the headset to work with your mobile. Once you've done this, your mobile remembers the headset's ID. You can find more details in your Bluetooth® headset user guide.

To connect with a Bluetooth® headset:

- Press MENU.
- Scroll to select SETTINGS
 Bluetooth > Switch on >
 SELECT to switch on the
 Bluetooth® function.
- Scroll to Search for new devices > SELECT.

Make sure that your headset's Bluetooth® is switched on. See your Bluetooth® headset user guide for how to connect your mobile and headset.

CONNECTIVITY SETTINGS

CONNECT WITH A BLUETOOTH HEADSET

TRANSFER FILES FROM YOUR MOBILE USING BLUETOOTH

TRANSFER FILES BETWEEN YOUR MOBILE AND PC

PC SYNCHRONISATION



TRANSFER FILES FROM YOUR MOBILE USING BLUETOOTH®

You can transfer files from your mobile to PC or to other mobiles via Bluetooth®.

- Press MENU.
- Scroll to select MY STUFF and select your preferred file.
- Select OPTIONS > Send
 as > Bluetooth > Select
 SEARCH and select
 the device you want to
 transfer to, then follow
 the instructions.

TRANSFER FILES BETWEEN YOUR MOBILE AND PC

Connect your mobile and PC using the USB cable. You don't need to install any drivers on your PC. You'll need to make sure that your mobile's memory card is inserted.

- First insert the USB cable into your handset and your PC.
- Select Memory card transfer.
- Open your media folder on your PC. Then drag and drop your preferred tracks between your PC and mobile.

CONNECTIVITY SETTINGS

CONNECT WITH A BLUETOOTH HEADSET

TRANSFER FILES FROM YOUR MOBILE USING BLUETOOTH

TRANSFER FILES BETWEEN YOUR MOBILE AND PC

PC SYNCHRONISATION



PC SYNCHRONISATION

You can set up your mobile and PC so that the Contacts, Calendar, SMS and files are up to date and match each other. For more information, please refer to the PC sync software made for your mobile.

This feature is not available for Apple Mac.

CONNECTIVITY SETTINGS

CONNECT WITH A BLUETOOTH HEADSET


TRANSFER FILES FROM YOUR MOBILE USING BLUETOOTH

TRANSFER FILES BETWEEN YOUR MOBILE AND PC

PC SYNCHRONISATION

3

NEXT

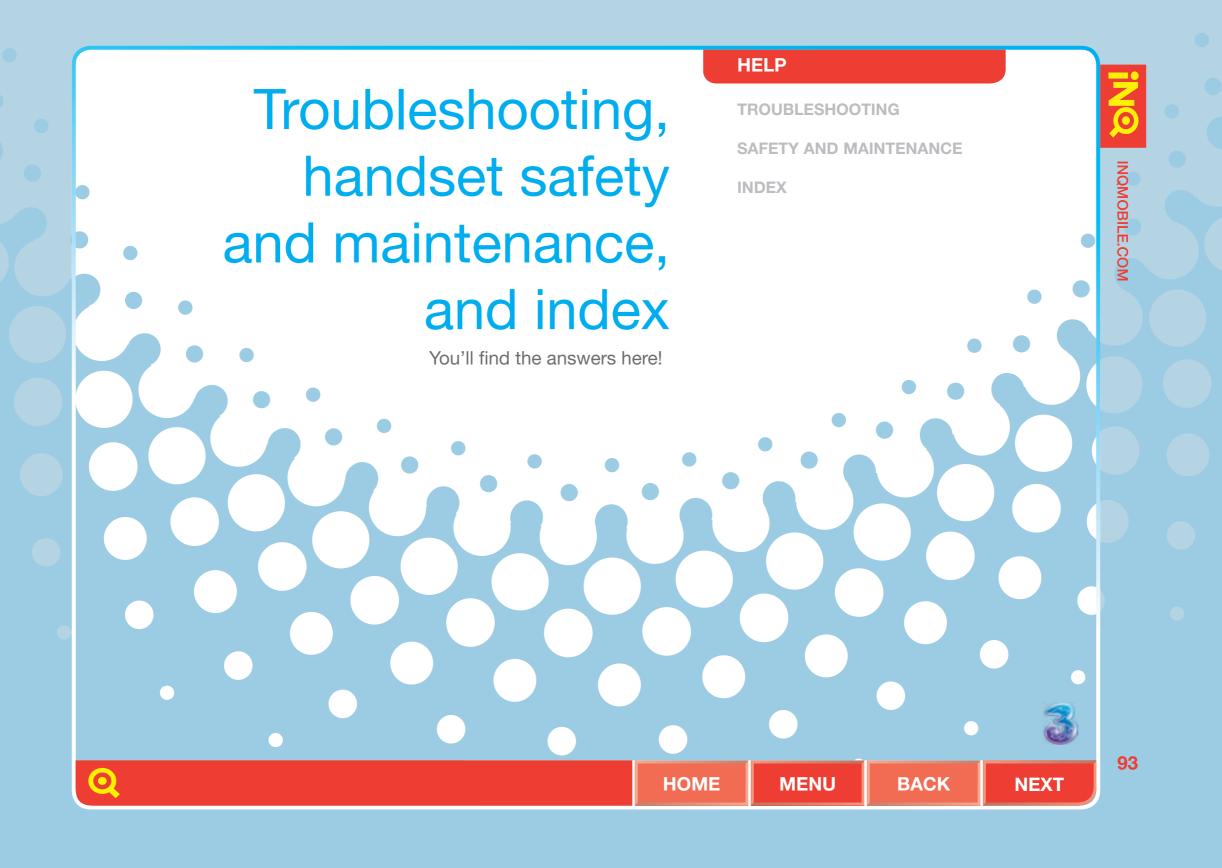

TROUBLESHOOTING

Having problems with your mobile? See below for a list of common questions. If we can't answer your questions here, then just call us on 333 from your mobile or 0870 7330 333 (3UK) from another mobile.

THE MOBILE CAN'T BE SWITCHED ON

POSSIBLE REASON

SOLUTION

You are not holding down for long enough.

Press and hold.

The battery power is used up.

Charge the battery.

Incorrect battery insertion.

Check and insert the battery correctly.

THE MOBILE IS SWITCHED OFF AUTOMATICALLY

POSSIBLE REASON

SOLUTION

Low battery power.

Charge the battery.

THE CALL VOLUME IS TOO LOW

POSSIBLE REASON

SOLUTION

The call volume has been set too low.

Increase the call volume.

HOME

MENU

BACK

NEXT

94

HELP

INDEX

TROUBLESHOOTING

SAFETY AND MAINTENANCE

TROUBLESHOOTING

THE PERSON YOU ARE CALLING CANNOT HEAR YOUR VOICE

POSSIBLE REASON

Call status has been set to mute.

The microphone is too far from the sound source.

SOLUTION

Turn off the mute function on the call menu.

Put the mobile's microphone closer to your mouth.

THE INCOMING CALL DOESN'T RING

POSSIBLE REASON

The mobile has been set to silent mode.

The ring volume has been set too low.

The call diverting option has been set.

SOLUTION

Reset the ring type in Profiles to Normal or Loud.

Increase the volume in Profiles.

Cancel call diverting in Settings.

THE BATTERY CAN'T BE CHARGED

POSSIBLE REASON

The battery is worn out and the charging time takes too long.

The battery doesn't connect well to the mobile.

SOLUTION

Charge when the mobile prompts low battery.

Ensure the battery has been inserted correctly.

HELP

TROUBLESHOOTING

SAFETY AND MAINTENANCE

INDEX



95

Q

HOME

MENU

BACK

TROUBLESHOOTING

CAN'T DISPLAY NETWORK

POSSIBLE REASON

The USIM card has been incorrectly inserted.

The phone has been set to Airplane Mode.

SOLUTION

Refer to the USIM card insertion method.

Change the setting when it is safe to do so.

THE MOBILE DOES NOT RECOGNISE THE MEMORY CARD

POSSIBLE REASON

The memory card has been incorrectly inserted.

The memory card has been damaged.

SOLUTION

Insert the memory card correctly according to instructions in the user manual.

Replace the memory card.

HELP

TROUBLESHOOTING

SAFETY AND MAINTENANCE

INDEX



SAFETY AND MAINTENANCE

USAGE ENVIRONMENT

Please remember to obey the relevant rules and regulations whenever you use your handset. This will help keep you and others around you safe.

Here are some general rules related to use of your handset in certain places:

- Using your handset in a plane can cause interference to the aircraft navigation system and communications. Switch off your handset before boarding and, unless use is permitted by the airline, switch off your handset during the flight.
- To keep safe on the road, do not use the handset when driving. If you must use it, and it is permitted in your country, use a hands-free kit with a fixed cradle (and make sure you still exercise proper control of the vehicle) or stop at a safe location by the roadside before making or answering a call.
- Switch off your handset when in petrol stations or any area with flammables, explosives or chemicals and follow any safety signs and instructions.

GENERAL SAFETY AND CARE INSTRUCTIONS

- Your handset is a sensitive piece of equipment, always place it somewhere safe and not where it could fall and break.
- Do not expose the handset or battery to extreme heat or sun (such as on a car dashboard or window sill) as this may cause the handset or battery to overheat and cause physical injury.

MEDICAL DEVICES

Please switch off your handset when in a hospital or near any electronic medical equipment. Some personal medical devices can shield the handset's RF signal, but some can't. If you have any questions or need to find out more, please consult your doctor or the medical device manufacturer.

PACEMAKERS

 To avoid interference with a pacemaker, pacemaker manufacturers advise keeping a distance between your handset and heart pacemaker of at least 6 inches (15cm).

HELP

TROUBLESHOOTING

SAFETY AND MAINTENANCE

INDEX

3

SAFETY AND MAINTENANCE

Anyone wearing a pacemaker should keep a distance between the handset and pacemaker of more than 6 inches (15cm) when the handset is switched on and avoid carrying the handset in a breast pocket. When talking listen with the handset ear on the opposite side of the body to the pacemaker.

HEARING AIDS

 Phones may cause interference to some hearing aids. If there is any interference, please contact the manufacturer of your hearing aid for advice.

EMERGENCY CALLS

Your handset may not always be in range of a mobile network and networks are sometimes unavailable, so you should not rely on your mobile phone as the only means of communication in an emergency.

TO MAKE AN EMERGENCY CALL

- Ensure your handset is switched on.
- Input the local emergency number correctly (such as 999). Different countries have different emergency numbers. Dial 112 if you do not know the local emergency services number.

- Press the call button.
- Provide all important information to emergency services as accurately as possible.

BATTERY INFORMATION AND CARE

- Always use the battery and charger provided with the handset or which is approved for use with the handset.
- Do not touch the handset, battery or charger with wet hands while it is charging.
- Switch off the handset and disconnect the charger before removing the battery from the handset.
- Do not leave the handset or battery in places with extreme heat or cold (such as in a car during summer or winter), or the battery life will be shortened.
- Do not short-circuit the battery.
 Accidental short-circuiting can occur
 when a metal object (coin, clip or pen)
 causes a direct connection between
 the contacts of the battery, for example
 when you carry a spare battery in a
 pocket or bag.
- Do not burn your handset battery or treat it as ordinary rubbish. Please follow the local environmental policy in

HELP

TROUBLESHOOTING

SAFETY AND MAINTENANCE

INDEX

3

98

HELP

TROUBLESHOOTING

SAFETY AND MAINTENANCE

INDEX

SAFETY AND MAINTENANCE

order to avoid endangering life and causing environmental damage. Please use any battery recycling service.

- If your battery leaks, dispose of it immediately and do not attempt to save it.
- The handset uses a lithium battery. How long a charged battery lasts will be influenced by your use of the handset features, the strength of the network signal and the handset settings.
- Generally, the charging time is 3-5 hours according to the current status of the handset (whether switched on, making a call, etc).
- To extend the battery to life when the battery is new fully charge and discharge the battery (in the handset) two or three times.
- Never use a battery that has been damaged.
- Make sure the battery is properly installed in the handset.
- If the battery life becomes noticeably shorter than normal, it is time to buy a new battery.
- Only use batteries that are approved by INQ for use with your handset and only

recharge your battery with a compatible charger.

- If a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, as overcharging may shorten its life.
- When you are not using your handset, it is a good idea to switch it off to save energy.

NOTE ABOUT ACCESSORIES

- You should pull out the plug of any charger or handset or other cable safely and slowly.
- If your handset, battery, or charger is not operating normally, please contact your network operator or an approved service centre as soon as possible.

OTHER SAFETY INFORMATION

- If you use earphones to listen to music or watch video, please do not turn up the volume too high as this could damage your hearing.
- Do not attempt to repair or dismantle the handset. This should be left to qualified staff and will void any warranty.

99 **NEXT** HOME **MENU BACK**

SAFETY AND MAINTENANCE

PHONE PASSWORD

 This protects your handset from unauthorised use by other people.
 The preset password is 0000.
 Please modify your handset password as soon as possible and keep it secret.

PIN CODE

- This is a personal identification code which is used to protect the USIM card from unauthorised use by other people. Generally, the PIN code is supplied with your USIM card. After activating the PIN code, you must correctly input your password each time to activate the handset.
- If you input your PIN code incorrectly three times in succession, the USIM card will be locked. You will need to input the PUK code to unlock it.
 (If you do not have a PUK code, please contact the network operator for this information. Make sure to input all characters.)

PUK CODE

 This is used to unlock the PIN code. If you incorrectly input the PUK code ten times in a row, then the USIM card cannot be used again. Usually the PUK code and USIM card are provided together. If you lose PUK code or it isn't supplied with USIM card, please contact your network operator or USIM card provider.

PIN2 CODE

This is the password which activates the special USIM card functions. Usually, the PIN2 code and the USIM card will be provided together. If you incorrectly input the PIN2 code three times in succession, it will be locked and you will need to input PUK2 to unlock it again.

PUK2 CODE

- This is used to unlock the PIN2 code.
- Usually the PUK2 code and the USIM card are provided together. PUK2 can modify the locked PIN2 code. If you incorrectly input the PUK2 code ten times in a row, you will not be able to access some of the functions. Please apply to your operator for a new USIM card. The PUK2 code cannot be changed. If you lose it, please contact your service provider.

HELP

TROUBLESHOOTING

SAFETY AND MAINTENANCE

INDEX

3

В		Feeds		M		S	
Battery		- Access	46	Menu tree	19	Safety and	
Charging	4	– Add	46	Messages		maintenance	97
 Power display 	14	- Delete	48	 Email messages 	66	Screen saver	8
		– Edit	48	 Multimedia 		Skype	
С		 Mark as read 	47	messages	64	- Call	57
Call		Update	47	Setting up		- Chat	63
Conference	58	- View	46	your email	65	Sign in	35
Features	59			 Text messages 	63	Sign out	36
– Making	58	G		Windows Live		Status	37
Receiving	57	Games and		Messenger	41	Switcher	17
 Video call settings 	60	applications	82	Modem	31		
		General set up		Multimedia		Т	
E		 Choosing a text 		 Playing music 	79	Text selection	67
eBay	43	entry method	10	 Taking a photo 		Transfer	91
Extra feature and security		Ringtone	8	or video	81	Troubleshooting	93
 Activate and change 		 Voicemail and 		 Viewing photos 			
your USIM PIN	86	videomail	9	and video clips	81	W	
Alarm	84	Wallpaper	7			Widgets	49
Calculator	85			Р		Wizard	5
Calendar	85	1		Planet 3	53		
 Master reset 	87	Inserting		Power on/off	6	Υ	
 Network settings 	87	 Memory card 	4			Your mobile	
		USIM card				Front view	12
F		and battery	4			 Keys and navigation 	
Facebook	38					Idle screen	13
		L					
		Last.fm	44				G)

INDEX

MENU

HOME

BACK

101